

Partizan PAR-QM11 Desktop Software Manual




BE DIFFERENT


LEAD WITH IT



1. Double click on “”, enter QR code Reader parameter setting page,

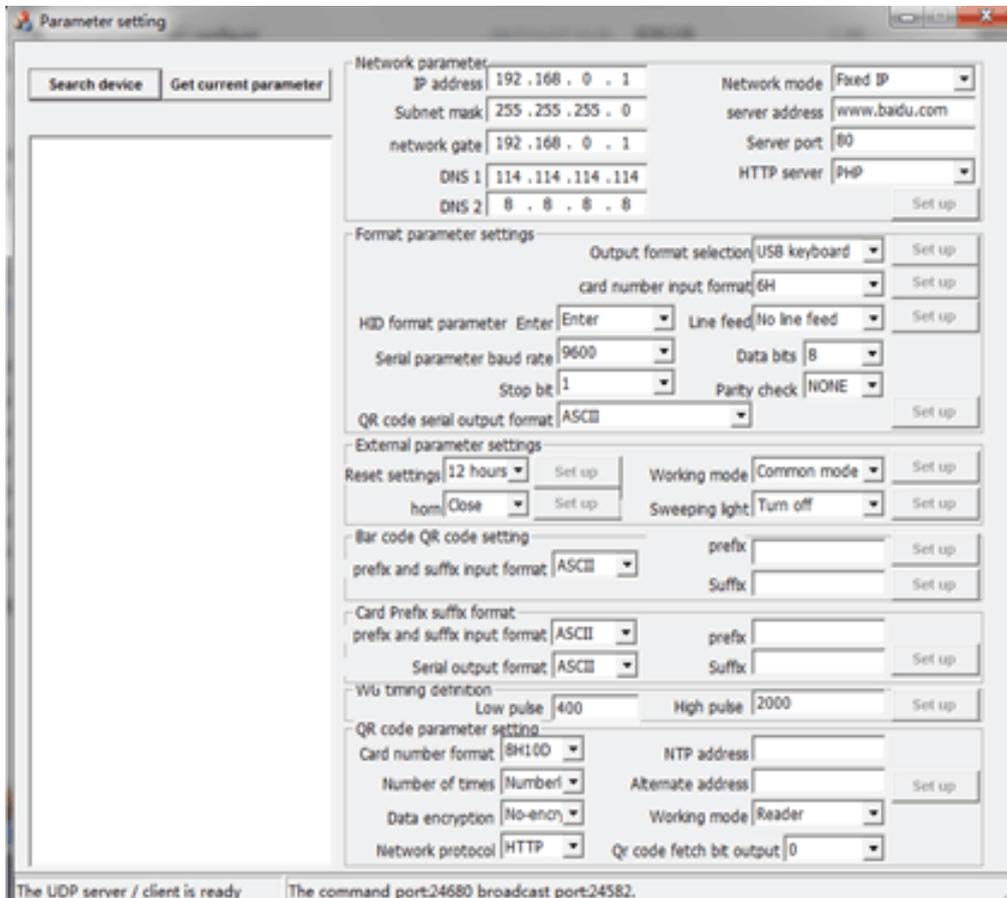

2. Use mini-USB data cable connect the QR code reader to PC, fill-in light on, buzzer rings, QR code reader start done, then use the internet cable connect the QR code Reader to PC.
3. QR code Reader default fixed IP is 192.168.1.99, client PC manual setting the same network segment with the QR code Reader, follow the operation as below Picture, can get the QR code reader parameter via the software

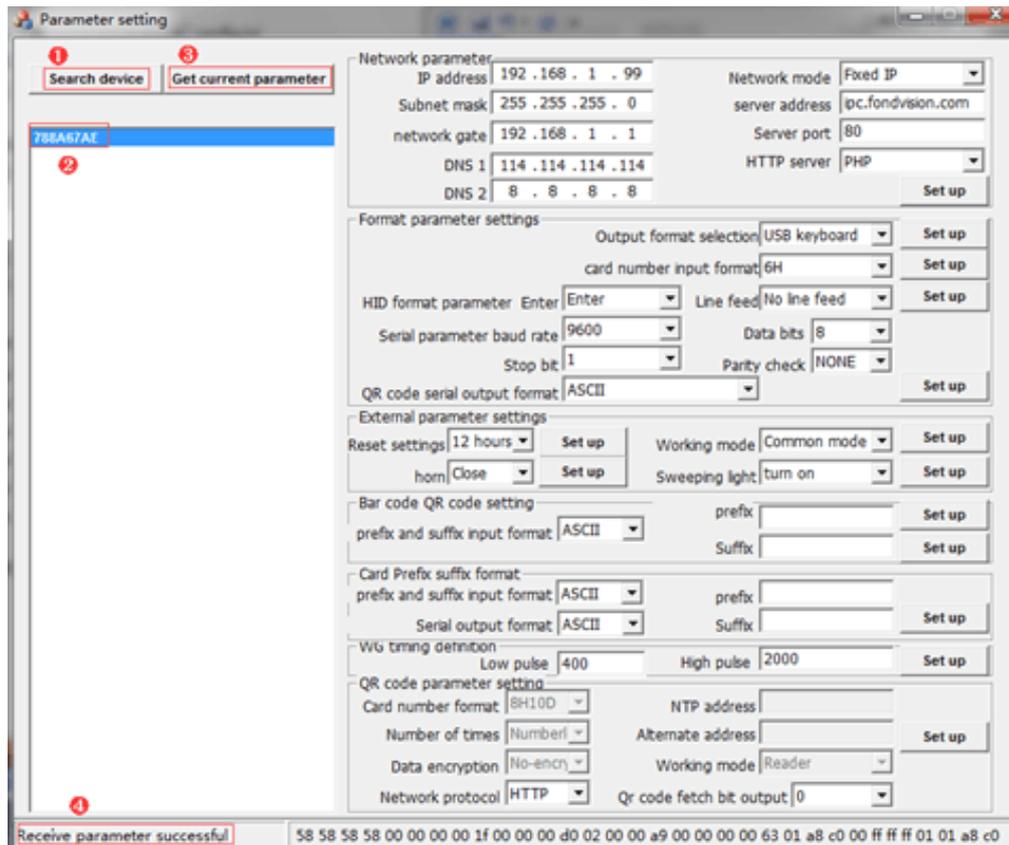

4. Function parameter specification:

4.1. Network parameter

Mainly include network parameter of the QR code Reader, configure relevant parameter, click setting can done setting.




Internet mode: default fixed IP:192.168.1.99 mode, can select auto obtain mode

【HTTP address】 HTTP output mode need use domain name address

【HTTP sever port】 HTTPoutput mode need use sever port;

【Docking services Voice】 HTTP output mode, sever docking interface language PHP、JSP、C#、ASP option)

4.2. Format parameter setting

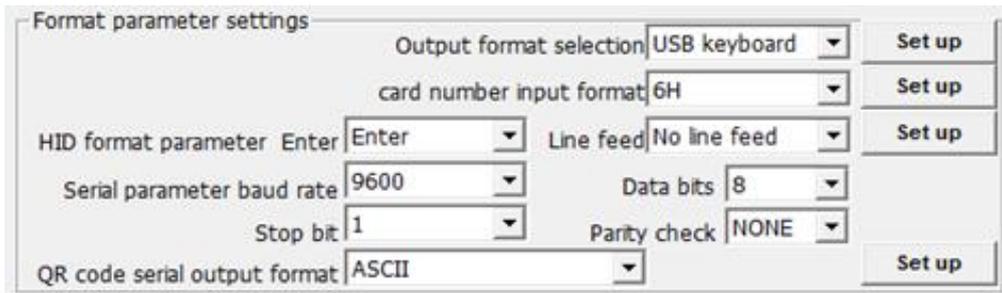

Format parameter settings

Output format selection	USB keyboard	Set up
card number input format	6H	Set up
HID format parameter Enter	Enter	Set up
Line feed	No line feed	Set up
Serial parameter baud rate	9600	
Data bits	8	
Stop bit	1	
Parity check	NONE	
QR code serial output format	ASCII	Set up

【output format selection】 USB Virtual keyboard、 USB virtual serial port、 HTTP、 MQTT、 RS232、 WG26、 WG34、 RS485、 access control system output(not enabled)、 TCP、 UDP functions

【card number output format】 6H、 8H、 6H10D、 8H10D、 2H3D+4H5D option, this card number format setting is invalid for QR Code

【HID format parameter】 data output if send carriage return、 If send line feed, this parameter setting is invalid for USB virtual serials port, carriage return only valid for USB virtual keyboard, linefeed only valid for RS232

【parameter】 can adjust correspond parameter as you need, this parameter setting is invalid for USB virtual serial port, only valid for RS485, RS232

【QR code serial port output format】 DEC、 HEX、 DEC Reverse、 Hex Reverse、 ASCII option, (this parameter only valid for RS485,RS232“RS485、 RS232”, Hex、 Hex Reverse output format is Hex card number, total bit is odd, output is ASCII, Even number, output is HEX card number)

4.3. External parameter



External parameter settings

Reset settings	12 hours	Set up	Working mode	Common mode	Set up
horn	Close	Set up	Sweeping light	turn on	Set up

【rest setting】 0 for not reset, 12hours interval、 24 hours interval;

【working mode】 common mode, single mode, interval mode,

Common mode: can reading QR code constantly;

Single mode: the same QR code can not reading constantly;

Interval mode: reading the same QR code need waiting 15 seconds.

【horn】 not enabled;

【scan fill-in light】 turn on and off for camera fill-in light;

4.4. Bar code, QR code setting



The screenshot shows a configuration window titled "Bar code QR code setting". It contains a dropdown menu for "prefix and suffix input format" set to "ASCII". To the right, there are two input fields: "prefix" and "Suffix", each followed by a "Set up" button.

setting QR code prefix and suffix, add the correspond prefix and suffix to QR code

【prefix and suffix input format】 ASCII、 HEX option, setting the prefix and suffix format output;

4.5. Card number prefix suffix format



The screenshot shows a configuration window titled "Card Prefix suffix format". It contains two dropdown menus: "prefix and suffix input format" set to "ASCII" and "Serial output format" set to "ASCII". To the right, there are two input fields: "prefix" and "Suffix", each followed by a "Set up" button.

setting prefix and suffix, add the correspond prefix and suffix to card number(this parameter only valid for RS485 、 RS232)

【 prefix and suffix input format】 ASCII、 HEX option, setting the prefix and suffix format output;

【serial port output format】 ASCII、 HEX option, setting the prefix and suffix format output;


4.6. WG timing sequence defination



The screenshot shows a configuration window titled "WG timing definition". It contains two input fields: "Low pulse" with the value "400" and "High pulse" with the value "2000". A "Set up" button is located to the right of the "High pulse" field.

setting the wiegand output high-low pulse time period, setting the timing sequence according to the actual controller.

4.7. QR code parameter setting

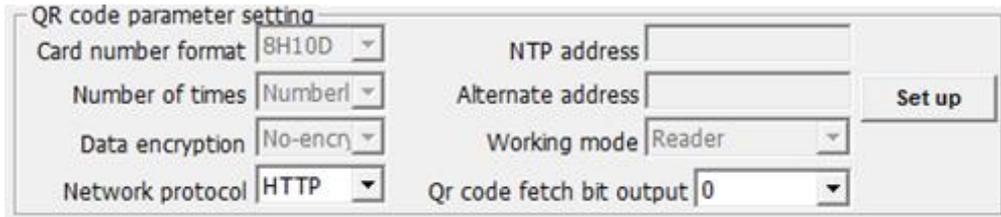

QR code parameter setting

Card number format	8H10D	NTP address		Set up
Number of times	Number1	Alternate address		
Data encryption	No-encry	Working mode	Reader	
Network protocol	HTTP	Qr code fetch bit output	0	

【card number format】 8H10D、Hex、 2H3D+4H5D option, default is 8H10D
(this parameter only valid for WG26、 WG34)

other function parameter not enabled



BEST SOLUTION FOR COMPLETE SECURITY
FROM EUROPEAN MANUFACTURER!

Technical support:

E-mail: support@partizan.global

Skype: partizan-support

Chat: +42 077 673 78 89 (Viber, Telegram, WhatsApp)



Technical support working time:

<https://partizan.global/support/technical-support/>



Partizan software:

<https://apps.partizan.global/>